







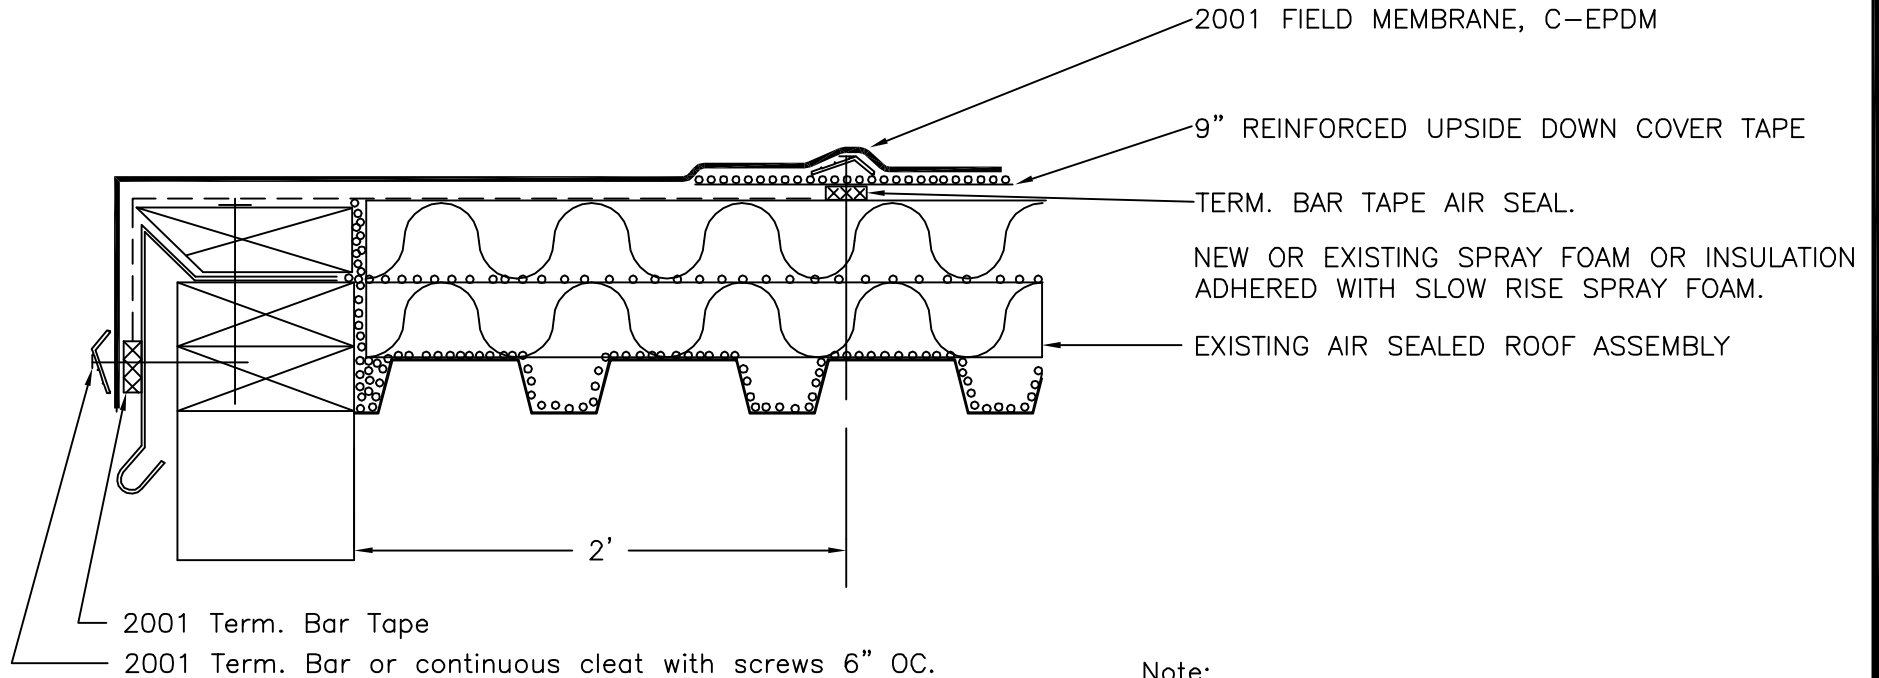


### Slow Rise Spray Foam Sealed Deck and Perimeter



**Note:**

1. Perimeter adhered to Surface or 2' around perimeters and penetrations.
2. For building over 30' install cover tape 3' to 4' back and adhere membrane to perimeter.

	Paste Sealant		2001 Term. Bar Tape
	Rubber to Rubber		2001 Zip Tape
	Bonding Adhesive		Insulation
	Water Cut-off Mastic		2001 Air Seal Rope

<b>TITLE:</b>	
<b>Dwg #:</b> 4FINAL	<b>Drawn by:</b> S.HAFERSAT
<b>Rev. Date:</b> 1-6-00	<b>Approved by:</b>
<b>Dwg. Date:</b> 10-5-98	<b>Scale:</b> NTS

**2001 Company**

325 Thomaston Ave.  
P.O. Box 2557  
Waterbury, CT 06702-2557

*© Thomas L. Kelly - Patent Pending*